



Instruction

2. Assemble Left side plate & Right side plate
(M6 screw and M8 washer)

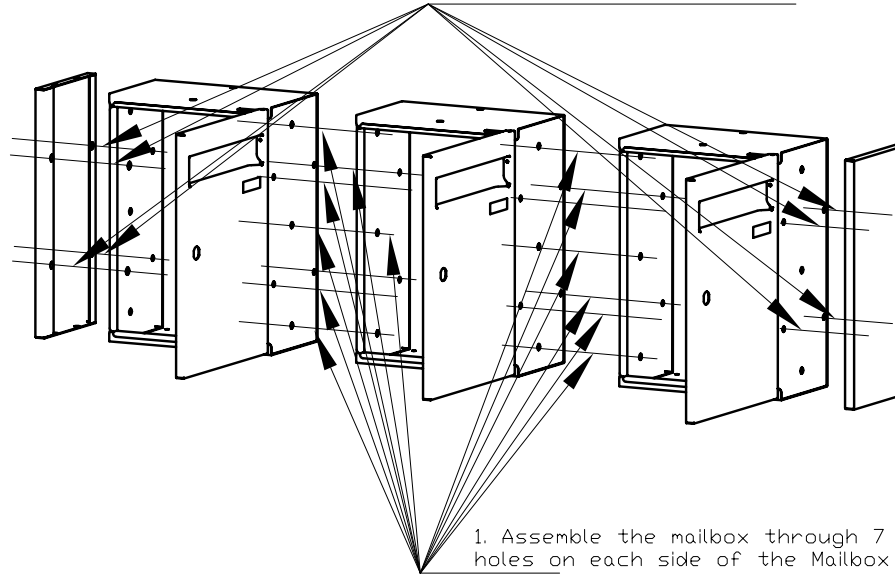

1. Assemble the mailbox through 7 screw holes on each side of the Mailbox
(M6 screw M8 washer and M6 nut)

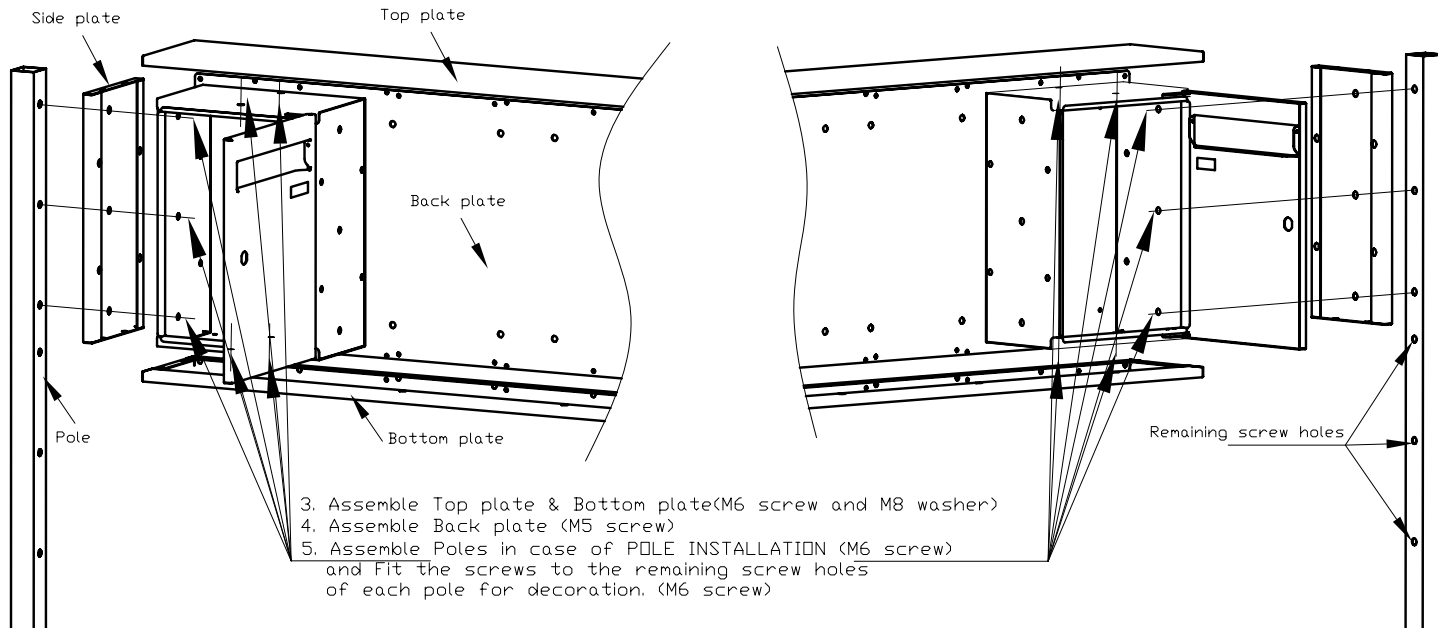

3. Assemble Top plate & Bottom plate (M6 screw and M8 washer)
4. Assemble Back plate (M5 screw)
5. Assemble Poles in case of POLE INSTALLATION (M6 screw)
and Fit the screws to the remaining screw holes
of each pole for decoration. (M6 screw)